WATER IONIZER





OPERATION MANUAL

Model: BTM-303D









* Keep the manual in a safe place and refer to it whenever needed.

* The manufacture and distribution company will not be held responsible for any malfunction or accidents resulting from incorrect installation or improper handling.





BIONTECH Co., Ltd.

BTM-303D (영).indd 1

Table of contents




- ① Please have the lonizer installed according to the directions in this manual. It is advisable that a competent plumber perform the installation.
- ② Installation and operation should be carried out in conformance with building and construction codes, running water regulations and city ordinances.
- ③During the final inspection, be sure to check for leakage, flow rate and full operation of all functions.
- After completing the installation, read the manual and take a pH measurement with supplied pH test reagent drop (See Page 19).
- (§) Depending on local water quality, pH of the water may vary, particularly in areas where well water is supplied as tap water.


Table of contents

1. Parts	3
2. Name and description of each part	
3. Safety preparations	
4. Installing Your Ionizer	
Precautions for Installation	
•Installation Directions	9
5. Prior to Use	
Precautions for using the product	14
•Using the product appropriately for each purpose	15
•Directions for Storage and Maintenance After Use	16
6. Producing Ionized Water	17
Selecting Alkaline Ionized Water	17
Selecting Acidic Ionized Water	17
Selecting Purified Water	18
•Self Cleaning	18
•pH(Ion Concentration) Measurement	19
7. Filter Replacement	19
•Filter Replacement Period	19
	20
8. Using the Cleaning Filter	21
9. Using Ionized Water	22
10. Support	24
•Questions and Answers (Q&A)	24
•About after service (A/S)	26
11. Product Specifications	30

- The following components need to be checked before installation.
- The illustration shows basic components, their shapes may appear different from the actual components

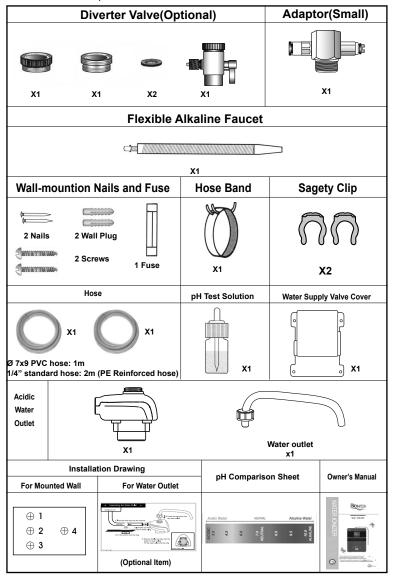

• The supplied standard parts should be used, Installing parts that are not covered in the warranty may be physically harmful and/or cause property damage.

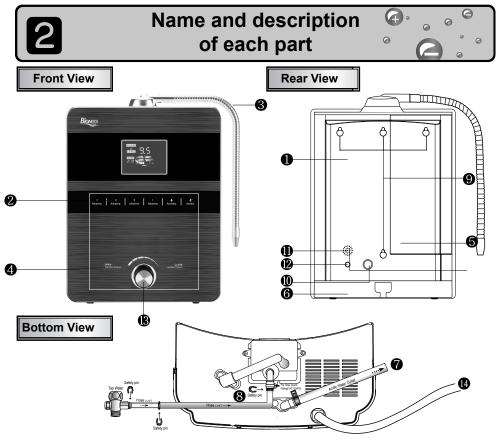

Number	Name	Function
1	Back Panel	Cover for circuit board and internal ionizer parts.
2	Control Panel	Function controls and display.
3	Ionized Water Outlet	Outlet for either alkaline or acidic water (user-selected.)
4	Fornt Panel	Circuit apparatus and devices.
5	Filter Cover	Filter protection cover.
6	Bottom Panel	Transformer, electric cord, and devices for fixing parts.
7	Acidic Water Outlet	Outflow of acidic water(control of acidic water quantity).
8	Water Inlet	Tap water supply.
9	Wall-mounting Groove	For wall mounting using nails.
10	Fuse Holder	Fuse.
11	Audio Speaker	Voice and Melody.
12	Audio Volume Control	Loudness control.
13	Water Supply Control Valve	Ionizer operation and water flow adjustment(On/Off).
14	Electric Cord	Electric cord for connecting with the electric wall socket.

Control Panel 2 Acidic Water 3 Filtered Water 4 Cleaning **5** Drain Indication Lamp Indication Lamp Indication Lamp Indication Lamp - Lights up when Acidic - Lights up when filtered - Lights up while cleaning and - Lights up after cleaning water is selected. water is selected. cuts off automatically when when water is draining. finished. ▶ Indication light for flow volume. **N**TECH High indication light. Alkaline Water Indicating when the flow volume is higher than the Indication Lamp appropriate level - Lights up when alkaline water is selected. 2 Standard indication light Indicating when the flow ▶Filter Life Indication volume is normal, and the indication level is varies depending on the flow ► Error Indication volume - Electrolyzer overheat 4 3 2 1 Alkaline Alkaline Alkaline - Failure of cleaning 3 Low Indication Lamp - Overflow indication Indicating when the flow volume is lower than the appropriate level ▶ Phone No. to order filters service center information ► [Alkaline Water] Selection Buttons ► [Purified Water] -Selecting Alkaline Selection Button Water Selecting Purified (Alkaline 1,2,3,4) Water only. ► [Acidic Water] Selection Buttons -Selecting Acidic water:

*** IMPORTANT:**

When seeing 3.5 on the display and the melody is playing please do Not drink the water until the melody stops playing or you select a different setting.

[Acidic]



Safety Preparations





Description of the symbol marks

The following describes the precautionary items that can prevent the potential damage to the body or the property. The cases of misapplication and resultant risks are divided into Warning and Caution items. You are required to read thoroughly and comply with the descriptions considering they are related to your safety.

- Caution - You should read the documents marked with the following symbols.



 Indicates that deadly effect can be caused to the body if you use the product wrongly because of your disregard for the items.



•Indicates that injury to the body or damage to the property can be caused. if you use the product wrongly because of your disregard for the items.

- Prohibition

Marks	Classification	Description
	General items to be prohibited	●Indicates the general items to be prohibited.
	Fire sources to be prohibited	 Indicates the possibility of the product or components catching fires due to external sources of fire.
	Showering to be prohibited	•Indicates the possibility of the product causing electric shocks due to electric leakage if it is submerged.
	Disassembly to be prohibited	●Indicates the possibility of the product causing electric shocks if it is disassembled

- Instruction

Marks	Classification	Description
0	General	Items related to the general behaviors of users.
	Disconnecting the plug from the wall socket.	The plug needs to be disconnected from the wall socket if there is a possibility of malfunctioning or lightening.

BTM-303D (영).indd 6 2016-08-31 오후 1:26(08

WEEE Directive



This marking shown on the product or its literature, indicates that it should not be disposed with other household wastes at the end of its working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take this item for environmentally safe recycling.

Business users should contact their supplier and check the terms and conditions of the purchase contract. This product should not be mixed with other commercial wastes for disposal.

Warning - Should be followed for your safety.



- Do not apply any different power voltage other than the indicated power voltage.
 If not followed, fires or electric shocks can be caused.
- Do not use any other fuse with different capacity.
- Stop using the product immediately when any malfunctioning is found.



Do not handle the electric plug or operate the power button with wet hands.
 If not followed, electrical shocks can be caused.



- Should hold the electric plug when inserting it into the wall socket or removing it from the socket.
- Damage to the electric cord, fires or electrical shocks can be caused when if the cord is pulled.
- Clean the wall socket after removing the electric plug.
 When there are lots of dusts settled on it, fire can be caused.



Do not connect multiple cords to one single wall socket.
 When a wall socket is shared, abnormal heat can be generated, possibly causing a fire.



- Electrical shocks, short-circuiting, ignition of fires can be caused if a damaged electric cord or plug is used.
- Do not damage, process or forcibly wind or pull the electric cord.
- -The cord can be damaged, possible leading to fires or electric shocks.
- Do not fix the electric cord by using a stapler.
- -The cord can be damaged, possible leading to fires or electric shocks.



- Electric shocks can be caused if the product is dropped into water by mistake.
 The following measures need to be taken.
 - Remove the electric plug from the wall socket.
 - Recover the product from the water.
- ③ Contact the sales shop or the main office for advice.



Should not arbitrarily modify, disassemble or repair the product.
 If not followed, fires and electric shocks can be caused.
 The company will not be held responsible for any accidents generated from such activities.

BTM-303D (영).indd 7 2016-08-31 오후 1:26308



Installing Your Ionizer






Caution - Malfunction or accidents can be occured




- Do not place any other objects on the product.
- Do not install the product in the areas described as the following.

Installation Precautions

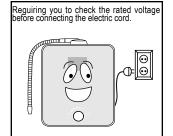

Do not install the product in a place where the sunlight comes in directly or the temperature goes below zero.



If not followed, the case can be transformed or broken due to freezing Precautions for connecting the acidic water




- Install the acidic water hose lower than the main case
- If the hose is longer than necessary or higher than the main case, the ion generation can be affected, possibly leading to a change in the taste of water.

Should connect the product to the cool water pipe (If connected to the warm water pipe, the purification filter and the electrolytic bath can be damaged)




■ If not followed, the life span of the filter will be shortened.

Avoid any place where heat of fire can be directly contacted




■ If not followed, the case can be transformed, possibly leading to water

Do not modify the product arbitrarily.



■ If not followed, damage to the product or risk to your safety can be caused.

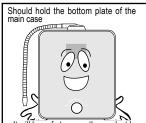

It will be safe to move the product by holding the product at the bottom plate.



If not followed, damage to the product or risk to your safety can be caused.





Caution



- If the product is dropped, electric shocks can be caused due to the internal malfunction following the impact from the dropping. The product needs to be taken to the sales shop or the main office in order for you to request an inspection.
- The purification filter can be broken due to freezing if the product is used in a place where it is freezing cold, requiring the product, if not used, to be stored in a place where the breaking due to freezing can be prevented, but after the purification filter is removed first.

BTM-303D (영).indd 8 2016-08-31 오후 1:26:08



Caution




- Check whether the components to be installed at the water tap are appropriate.
- Should use the standard hose (1/4"), supplied by the company for the connection.
 Use the one-touch adapter to fasten the hose before fixing the safety pin as illustrated in Page 3.
 - If the standard hose is not used, damage due to water pressure can be caused, possibly leading to water leakage




- Do not connect the product to a warm water pipe.
 - Degradation of purification capacity and malfunctioning can be caused.

■ How to install


1. Wall mounted water tap

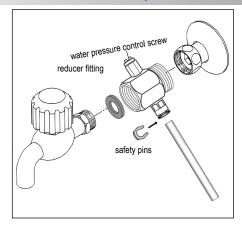


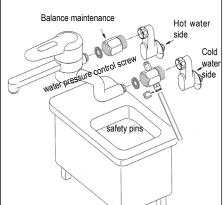



- 1. Disconnect the water tap from the water pipe.
- 2. Rotating the angle stop adaptor into the water pipe. (Single-water tap)
- 3. Assemble the water tap back into the adaptor. (Single-water tap)
- 4. Install the standard compliant adaptor between the water pipe and the water branch pipe. Then install the which needs to be connected to the water ionizer to the cold water pipe, while connecting the balancing adaptor to the warm water pipe. (Water taps for cold and warm water)
- Place the rubber gaskets between the water pipes, water tap, and adaptor, and should apply the Teflon tape to the connection parts to assemble them.
- 6. Insert the inlet hose into the one-touch fitting installed to the adaptor and then fasten the safety pin.
- 7. Adjust the water pressure control screw of the adaptor to a appropriate level (Alkaline water flow standard: 1.5 ± 0.5 ℓ/min)
- ** Should use the standard inlet hose (1/4") and fix the valve cover in the direction of the hose to prevent the hose from being bent or the fastening nut from being loosened.

2. Deck type sink mounted water tap

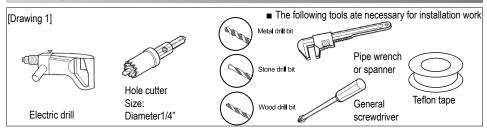

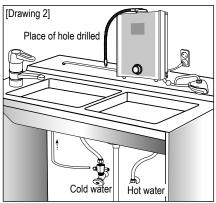

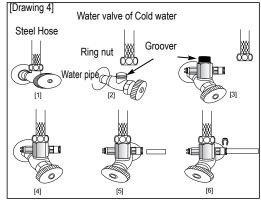

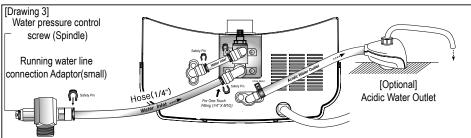


- Prepare the tools for installation as drawing: Electric drill, Hole cutter, Pipe wrench or spanner, General screwdriver, Teflon tape 1pc (Drawing 1.)
- Turn off the water valves before installation under the sinkdeck
- 3. Disconnet the water tap from the cold water pipe.
- Drill a hole for the 1/4" hose appropriate place somewhere in sinkdeck and make the connection to the inlet of the product
- 5. Find the cold water pipe inside the sink deck and connect the adapter to the cold water pipe (Drawing 2.)

- 6. Connect the standard connection hose (1/4") to the adapter installed with one touch fitting of union. (Drawing 3~4) Insert the inlet hose into the one touch fitting and insert the safety pin as in drawing.
 - (Pls check if the hose has been securely fitted to the end of one thouch fitting, if not, it causes water leakage for water pressure)
- After the connection, adjust the water pressure control screw of the adaptor to an appropriate level.
 (Alkaline water flow standard : 1.5±0.5l/min)
- Check any possible water leakage at the connection parts after the installation
- Should use the standard inlet hose (1/4") and fix the valve cover in the direction of the hose to prevent the hose from being bent or fastening nut from being loosened.

BTM-303D (영).indd 10 2016-08-31 오후 1:26309


3. Diverter Valve

How to assemble the valve to the faucet

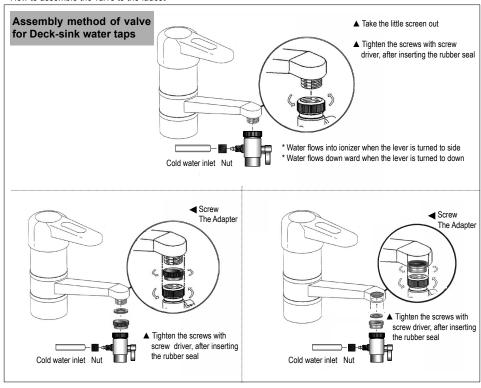

4. Hose Connected Method

After finishing of connection, cover the water supply valve cover part with screws again.

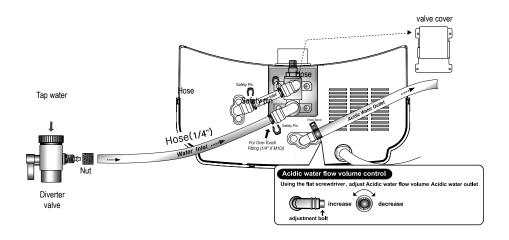



Caution



- Do not install the product in the following areas:
- If not followed, malfunctioning can be caused.
- •If vibration and impact can be fel
 •If horizontality can not be acquired
- •If direct sunlight comes in •If bathroom is installed or winds and rains can affect
- •If there are lots of moisture or dust •If there is a risk of breaking due to freezing
- •If heat of fire can be felt •If damage can be caused to the product



- You are required to contact the sales shop or the specialized installer for queries when you attach the product to the wall.
- Improper mounting may result in the product falling of, accident or mal-function.

5. Steps for assembling the component before installing them

- First of all, assembling the flexible pipe to the half-moon shaped alkaline water outlet at the upper part by turning it clockwise.
 - Measure the distance between the place for installation and the adapter installed to the water tap and then cut the hose with an extra length.
 - 2.Cut the PVC hose for the acidic water into the length of 50~70cm and place it lower than the product.

Should use the standard inlet hose (1/4") and fix the valve cover in the direction of the hose to prevent the hose from being bent or the fastening nut from being loosened. The safety pin needs to be inserted before using the water.


- •The product can be used conveniently by placing it on any place by applying the wall mounting or stand type (Turn table) depending on the place of installation.
- •After installation, connect the product to the power line.
- •When the water flows through the product, the power will be turned on automatically. Then, select Purified Water menu to enable the water branch pipe to open and close repeatedly to allow the water to flow for 2~3 minutes freely. Then push the pH button to set the desired concentration and compare it with pH comparison sheet. The black water that will come out is the filter dusts flowing with water, not dangerous to the body. (Refer to How to measure the pH value in Page 18)

12

6. How to install in different places

A) When installing the product onto the wall

- Apply water to the installation drawing and place it onto the wall while keeping the horizontality
- Of those nailing positions at the width (1~3) or the height (2~4), choose the convenient ones for driving 2 nails
- Place the hanging holes of the product onto the nails
 Positions of nails
- B) When placing the product on the sink deck and its supports.
 - -Place the main case of the product on an appropriate position.
 - When the above steps are finished, use the hose to connect the valve cock of the adapter to the inlet pipe at the bottom of the main case of the water ionizer

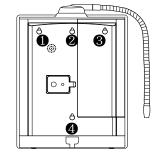

7. Audio volume control

BTM-303D (영).indd 12

- 1. Using Flat-head driver, adjust the loundness.
- 2. Screwing yellow nail to left, volume will be up. Screwing it to opposite, Volume will be down.





8. In case of power failures or suspension of water supply

- In case of power failures.
- Turn off the water branch pipe in case of power failures.
 (When letting water flow through, purified water will come out)
- Use the product normally when the power is recovered.
- In case of suspension of water supply.
- · Do not use the product.
- Stop the water from flowing through when the water supply is suspended in the middle of using the product

When the water supplied is resumed, let the water flow sufficiently for direct water supply or showering in order to help the inside air and other materials come out. Without going through such steps, the water still can be used normally, but with the risk of drastic decrease of the life span of the filter when allowing air or other materials flow through the main body.



Prior to Use



Precautions for use

- the appliance is not to be used by children or persons with reduced with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction
- 2. children being supervised not to play with the appliance



Important safeguards

When using electrical products, especially when children are present, basic safety precautions should always be followed, including the following: READ ALL INSTRUCTIONS BEFORE USING



Danger - To reduce the risk of electrocutions

- 1. Always unplug this product immendiately after using.
- 2. Do not use while bathing.
- 3. Do not place or store product where it can fall or be pulled into a tub or sink.
- 4. Do not place in or drop into water or other liquid.
- 5. Do not reach for a product that has fallen into water. Unplug immediately.



Warning - To reduce the risk of burns, electrocution, fire, or injury to persons

- 1. A product should never be left unattended when plugged in.
- 2. Close supervision is necessary when this product is used by, on, or near children or invalids.
- Use this product only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
- 4. Never operate this product if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water.
 Return the product to a service center for examination and repair
- 5. Keep the cord away from heated surfaces.
- 6. Never block the air openings of the product or place ot on a soft surface, such as a bed or couch, where the air openings may be blocked. keep the air openings free of lint, hair, and the like.

BTM-303D (영),indd 13 2016-08-31 오후 1:2610

- 7. Never use while sleeping or drowsy
- 8. Never drop or insert any object into any opening or hose.
- Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.



Caution



Do not use the following water, as problems may arise:

- Turbid and contaminated water
- Water with high concentration of red rust



Do not use any substance other than the designated glycerate calcium (electrolysis-stimulating) calcium) or calcium sulfite (chlorine-neutralized) in the calcium container unless obtained from ionizers.



Turn off the water supply valve when replenishing the calcium otherwise, water leakage may result.

Check for secure connetion of the calcium container cap, to avoid water leakage.



- Use tap water only.
- This machine is manufactured for drinking water based on standard tap water.
- •Do not use the following water, as problems may arise:
 - •Turbid and contaminated water •Water with high hardness
 - •Very salty water •Water with high concentration of red rust

Precautions for using the product

- •Do not hold up the main case while holding the outlet flexible pipe. (Cause for breakage)
- •Do not operate the strong alkaline ionized water (level 5) continuously for a long period of time. If you use the product in such manner, the system protective circuit (Temperature sensor) may be started, depending on the quality of water, and the electrolysis can be suspended.
- When using the product in a place where the water hardness is high.
 - •Before using the water initially daily, push the acidic water button to allow the acidic water to flow through for about 1 minute.
 - •In case of tap water, in places where the water is used a lot. You need to push the acidic water button one time daily to allow the water to flow through for the manual rinsing. (By selecting the acidic water button).
- ** In places where the water hardness is high or compounds of calcium are abundant, there can be white sedimentation inside the case, requiring additional purifying system to be used depending the level of the sedimentation.



Caution



- •Do not fill the calcium container with no other substances than the designated.
- Glycerin acid calcium (Electrolysis facilitating calcium) or calcium sulfite (Removal of chloride.)
- •Should turn off the water pipe when filing the calcium.
- If not followed, water leakage can be caused.
 - Check where the calcium container cap is surely fastened.
 - If not fastened surely, water leaksge can be caused when the water flows through.

BTM-303D (영).indd 14 2016-08-31 오후 1:26;10

Use the product appropriately for each purpose

pH level se	lection	Indicated	pH value instructed	
All	lkaline 4	When infusing vegetables to remove their bitter taste When washing vegetables Use it for drinking after consulting the doctor	10.0 ±0.5	▲ High
All	lkaline 3	•Recommendable for medical and culinary usage	9.5 ±1.0	Alkalinity
All	lkaline 2	•Recommendable for drinking and cooking	9.0±1.0	Low
All All	lkaline 1	•Recommendable for daily drinking	8.5±1.0	 Acidity
Pt Pt	urified	•Recommendable for initial drinking or dissolving powdered milk		
Ac	cidic	For washing dishes Strong acidic sanitary or rinsing water can come out when the water volume is adjusted Rinsing with Acidic water to eliminating Viruses Bacilli	3.5+1.0	High ▼

- ** The pH value instructed is acquired by taking into consideration the source water based on Seoul, Korea (Concentration of pH 7.0 \pm 0.5, the water flow standard of 1.5 ℓ /m (\pm 0.5 ℓ).
- ** The pH values of the alkaline and acidic ionized water may not fall into the range of the pH value instructed of the table above depending on the water quality and water flow volume.



Caution - Usage of the product

- Do not use flammable materials like benzene or sprays for the product.
 - Malfunctioning can be caused.
- Sufficient attention needs to be paid when a child of young age uses the product.
- Run tap water for 10 to 15 seconds prior to initial ionizer use each day.
- If ionizer is not used for several days, run water for at least 30 seconds prior to use.
- Contact the sales shop or the main office for advice when the generated water smells.
- Do not drop the product or apply strong impact to it.
 - Dropping or impact can cause malfunctioning.
- Do not block the water outlet. If blocked, water leakage or malfunctioning can be caused.
- Should place the outlet hose (Acidic water outlet) below the main case.
- Do not use the water which is above 30°C (86°F) If not followed, malfunctioning can be caused.

BTM-303D (영).indd 15 2016-08-31 오후 1:26 10

Directions for Storage and Maintenance After Use

1. How to store and manage the product after using it.

- 1 Turn off the power before moving the product
- ② Do not let water come inside the main body.
- ③ Do not block the outlet nozzle or the drainage hose arbitrarily. Do not bend or twist the hose arbitrarily.
- ① Turn off the source water supply valve when the system will not be used for a long period of time.
- (5) Disconnect the electric cord from the wall socket when the system will not be used for a long period of time.
- 6 Clean the surface of the main body with soft cloth soaked with soap water.

2. Precautions for using it.

(1) Precautions to be taken when using the ionizer.

- Pay attention to the following items when drinking the alkaline ionized water generated through the electrolysis.
- ① Consult a doctor before drinking the strong alkaline water of level 5.
- 2 Those people with achlorhydria need to take the advice from a doctor for drinking the treated water
- 3 Do not use any type of water that can not meet the water quality requirements for the drinking water
- The product is designed exclusively for the water of normal temperature, so warm water should not be used.
- ⑤ Do not drink the alkaline ionized water together with medicine.
- Those people who just started using the water need to begin with small amount of nearly pH neutral water. They need to consult a doctor for drinking the strong alkaline water.
- Stop drinking the water and consult a doctor if you feel abnormality after drinking the water, or if there is no alleviation of symptoms felt in the stomach even after continuously drinking the water.
- Those people who currently go through medical treatment need to consult a doctor before drinking the water.
- (9) Those people with problems with the kidney, such as renal failure, calcium excretion failure, should not drink the water.
- ① Those people who drink the alkaline ionized water need to check, once a month since after the initial drinking, whether the pH value is still within the range for drinking, through utilizing a glass electrode type pH device or colorimetry before they continue to drink the water.
- (1) Drink after the initial alkaline water flows through.
- 2 Avoid any metal container if possible and drink the water within a day while keeping it cold.

(2) Pay attention to the following items regarding the use environment and conditions.

- ① Should keep the water flow volume at an appropriate level in order to prevent the alkaline ionized water from being generated with difference in the pH value compared with the set pH value due to the difference in the water flow volume.
- ② Do not use the product in a place, like a bathroom, where temperature or humidity is high.
- 3 Use the product in a place where there is no slope.

Classification	Place of origin	Remarks
UF Membrane Filter	Korea	



BTM-303D (영).indd 16 2016-08-31 오후 1:26 10



Producing Ionized Water



Selecting Alkaline Ionized Water

Operation indication panel



- Open the water supply control valve to let the water flow in.
- 2. Use the pH button to select a stage.
 - The value of selected pH stage is indicated.
 - In case of "alkaline", any value between stage 1~4 will be indicated.
 - When normally started, the system provides the alkaine ionized water with previously set alkaline value.
- The product is ready to used.
- OVoice guidance: "Alkaline Ionized Water on Process."
- When the water supply control valve is turned off after selecting and using "Strong" alkaline, the setting will return to the previously set value of "Alkaline".
- Do not use the product in the "Strong alkaline" state for a long period of time. The power can be turned off due to the operation of the system protective circuit depending on the quality of water.

▶ Alkaline Level Buttons



▶ Indication of operation in progress



Indication light for water inflow.

When the tap water flows in, the water inflow indication light indicates 'L' when the water pressure is low and 'H' when it is high. You are required to adjust and keep the water pressure to make the indication light stay at the center of "NORMAL".

when the indication light stays at the standard level, about 1.5ℓ± 0.5ℓ /min.
of water will flow through.



Selecting Acidic Ionized Water

► Alkaline Level Buttons



When the acidity pH selection button for the operation is pushed, the acidic ionized water will flow through the alkaline ionized water outlet.

- 1. Open the water supply control valve to let the water flow in.
- 2. Use the acidity pH selection button for selecting (Melody comes out while the product is being used)
- Voice guidance: "Acidic Ionized Water on process."

► Indication of operation in progress



3. When the water supply control valve is turned off in the middle of the water being used, the setting will return to the previously set value of 'Alkaline'. In order to stop the operation in the middle of the use, other selection buttons need to be pushed to select other functions.

17



Caution

- · Acidic ionized water is not for drinking, so do not drink it.
- Use the water after letting the water flow through for about 5 seconds right after the generation is initiated
- Use the water initially daily after letting the water flow through for 10 ~ 15 seconds by opening the water tap completely
- Use the water after letting the water flow through for more than 30 seconds when using the
 product after not using it for a few days.



- Should not remove the purification filter when letting the water flow through the main case.
- Do not drink the acidic water.

Selecting Purified Water

▶ Purified water indicating button



▶ Indication of operation in progress



- Open the water supply control valve to let the water flow in to generate the alkaline ionized water of the set value.
- 2. Push the purified water indicating button.
- Indication light for purified water selection
- Voice guidanc "Crystal clear water on precess"
- 3. Use the purified water.
- 4.When the water supply control valve is turned off in the middle of the water being used, the selection of the purified water is called off and the setting will return to the previously set value of Alkaline . In order to stop the operation in the middle of the use, other selection buttons need to be pushed to select other functions.
- When the indication light for the purified water is turned off.
 When there is a change in the water pressure leading to the lowering of the water level, the indication light will be turned off and the setting will be returns to the previously set value of 'Alkaline'. Use the product by setting the value again after adjusting the water pressure.

Self Cleaning

Automatic Self-Cleaning inside the main body will be performed in the following cases in order for the cleaning of the electrolysis bath and sustaining of water generation function.

When the water flow volume of the alkaline or acidic ionized water reaches about 10*l*.

Rinsing will be performed for about 30 seconds after the water supply control valve is turned off.

When the water supply control valve is opened after the rinsing, about 0.2\(\ell\) of water will be drained.

- Do not let the water flow through while the rinsing is progressed . (Err 7 will be indicated if the water is allowed to flow through)
- When the rinsing is in progress, the indication light will be blinking and the melody will be heard.
- The rinsing process will be repeated until the Self-Cleaning is completed if the water is allowed to flow through while the rinsing is progressed.
- Even when there is more than 10ℓ of water flowing through, the automatic rinsing will not be performed if an operation is in progress. The automatic rinsing will be performed when the water stops flowing through.
- Please take note
- There can be 'water dripping' from the outlet pipe in the middle of the rinsing process, which is not an abnormal situation.
- The operation will stop automatically when the indication light for the rinsing is turned off after the rinsing is finished.
- Voice guidance: Self Cleaning."

► Indication of operation in progress



Indication light for water draining

When the water supply is opened after the rinsing is finished, the indication light for water draining will blink automatically together with a voice guidance. After about 0.2ℓ of water is drained the indication light will be turned off, and the setting will return to the previously set value of 'Alkaline' for the operation. (Do not drink the drained water)

Voice guidance: "Drain out, wait for a moment please." And when the draining is finished, there will be a voice guidance will say "Alkaline Ionized Water on process."

▶ Indication of operation in progress



pH (ion concentration) Measurement

The pH values (Ion concentration) of the generated alkaline or acidic ionized water can be measured.

- Check the generated water after adjusting the water pressure to meet the standard water flow volume (1.5ℓ ± 0.5ℓ /Min.) according to the ionized water generation method.
 - (The pH values can vary depending on the quality of water and the flow volume)
- Materials to be prepared: The pH Reagent parts
- How to measure
- 1. Let the generated water (Alkaline or Acidic ionized water) flow through for about 10 seconds.
- 2. After filling a transparent glass with 1/3 of the water, put 2~3 drops of the pH reagent into the water and shake it.
- 3. Compare it with the pH colorimetry.
- Please take note
- The color of the test solution will change as time goes by. (Compare the color of the test solution with the pH colorimetry before too much time passes by after dropping the test solution into the water)
- When disposing of the undiluted test solution, you need mix it with water to make it light before letting it flow out.
- When the pH concentration is measured, the color of the test solution can come out differently compared with the pH colorimetry due to the effect of various substances dissolved in the water such as carbonic acid gas.
- The p且 color of the alkaline or acidic ionized varies depending on the pH level.



Caution



- Do not let the pH regent contact the eyes and do not drink it.
- In case of drinking it by mistake, you need to drink lots of water. In case of the test solution contacting
 the eyes, you need to clean your eyes with sufficient water and then consult a doctor.
- Do not place it near any heat of fire. If not followed, fire can be caused.
- Do not store the regent in a place where it can be reached easily be children. Avoid any place where the temperature or moisture level is high

* The pH test solution is an expendable item. It can be purchased at the sales shop or the main office.



Filter Replacement



Filter Replacement Period

- When the water tastes changes or the water flow volume decreases dramatically, you need to check whether the life span is overdue.

Indication for filter replacement





Caution

■ In the following cases, the replacement period can be shortened drastically:

- When there is rusty water due to aged pipes
- Lots of impurities in the water for a short period of time
- If the product is used in a place where the water pressure is low.


19

BTM-303D (영).indd 19 2016-08-31 오후 1:26 12

How to replace the filter

■ Do not disconnect the electric plug.

(When the plug is disconnected, the system can be restored when the filter connector is inserted)

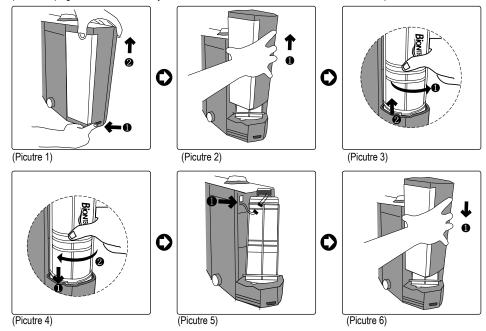

- 1. Open the cover and remove the filter. (Picutre1~3)
- Be careful of the possible water coming out of the filter. (It is not leakage)
- 2.Replace with a new filter. (Picture 4)
- Remove the sealing sticker of the filter.
- Check whether the O-ring is attached well at the bottom of the new filter first. Then, place the filter into the hole securely and turn it clockwise to insert it into the connection part. If a unbranded filter is installed, there will be a voice guidance saying "Filter rejected, mount correct one.", and the power will be turned off after 20 seconds.
- 3.Let the water flow through after selecting the purified water function.
- Let the water flow through for about 2~3 minutes.

 (Dusts of activated carbon which is the filtering medium may flow with water during the initial flow after the filter is replaced.)
- Check whether there is any water leakage at the installation section of the filter.
- 4.Insert the filter connector into the corresponding port (Picture 5)
- Check whether the filter usage status indicating number becomes [000].
- 5.Close the cover. (Picture 6)
- Please take note
- When you get the alkaline ionized water in a cup after the filter is replaced, there can be white bubbles. which are not abnormal.
- The ion concentration (pH value) can become slightly higher after the filter is replaced (For about 1 week). That is not abnormal.
- * Follow the steps mentioned above even when replacing the filter earlier than the time for the replacement.
- The filter without our company logo is not a genuine product. When a genuine filter is not used, the quality cannot be guaranteed and the normal after sales service(A/S) will not be available.

20



Using the Cleaning Filters



Cleaning Filter (Optional purchase)

Calcium scale in electrodes may cause....

The reason for the calcium scale on the alkaline side of the water ionizer is because the high pH of the water causes the minerals in the water to precipitate out of the water and become displaced.

Calcium scale on the electrodes causes the pH data of lonized water decrease because the source water is not coming in contact with the electrodes. once your water ionizer is cleaned using this metod, the pH of the ionized water will be resume higher because the water is now coming in direct contact with the cleaned electrodes

Symptom of calcium scale

when whitish floating substances are found in the alkalized water when the water output declines significantly when the pH of alkalized water drops significantly

Use of Cleaning Filter

Cleaning filter will eliminate most Calcium scale on the plates and inside the chamber of your ionizer allowing for longer life and better performance.

Cleaning filter provides the way to keep your water ionizer.


insures that the platinum/titanium plates remain clean and free of calcium.

How to use cleansing filter (Optional purchase)




Marning

- Clean the water ionizer machine for every 3-6 months.
- 2. Raise up the Flexible Alakaline Faucet a little higer than water ionzer body before cleaning.
- 3. Before starting cleaning, disconnect electric plug.

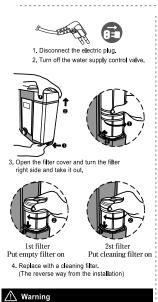

Do not use cleaning filter with main filter together at the same time in





Raise up the Flexible Alakaline Faucet a little higer than water ionzer body before cleaning.



 Turn on the water supply control valve until water drops from the tap part from the flexible faucet, then turn off the water supply control valve and wait for 3-5 hours as it is.





 Turn on the water supply control valve and let the water pass fluently for about 5-10 minutes.

10. Turn off the water supply control valve, replace with the previous filter same as of above #2. #3. Then, let the water passes for more than 1-3 minutes.




Close the filter cover and connect electric power.
 Then cleaning procedure is finished.

The Calcium scales can be seen after replacement of filter.
 Then let the water pass fluently before using.

BTM-303D (9),indd 21 2016-08-31 오후 1:2613



Using Ionized Water



1. How to use Alkaline Ionized Water

	For th	ne initial 7 da	ays	Wh	en using it d	aily
	Children	Adults	Remarks	Children	Adults	Remarks
Alkaline ionized water	level 1	level 1	2~3 cups a day	level 1~2	level 2~3	



Caution - Should follow the items for your safety.



- Do not use the following type of water
- Acidic water.
- Water drained after self cleaning.
- Water tested with the pH reagent.
- Water collected at the start of production. (About 1 ~ 2 cups of water)



- Be careful about the following items when drinking the alkaline ionized water.
- Do not drink the alkaline ionized water together with medicine.
- Those people with achlorhydria should not drink the water



- Do not use the water for raising fishes such as goldfish or tropical fish
- Do not use any aluminum made container vulnerable to the alkaline ionized water.
 Do not use any copper made container vulnerable to the acidic ionized water.
- Do not store the alkaline ionized water for a long period of time.



Those people who just started using the water need to begin with small amount of nearly pH
neutral water, and then adjust the pH level gradually for drinking the water.
 (Level 1 of the alkaline ionized water is for the initial stage drinking)

2. How to use Alkaline Ionized Water for the general purposes

- It will be good for your health if you drink it on an empty stomach in the morning or before going to bed.
- Set the alkaline water at the level 1~2 and try to drink 1~2 cups of water daily for a week (7 days). If you do not have any problems after the trials, it will be good for your health to set the level of ionized water at the level suitable for you body.

3. How to use Alkaline Ionized Water for the special purposes

■When cooking rice

Try to cook rice after soaking the rice in the alkaline water for $30 \sim 60$ minutes in advance. When cooking rice with the alkaline water, the rice will be glossy like glutinous rice, tasty, stored well and kept fresh for a long period of time.

■ Coffee, black tea and others

Help remove the bitter taste of coffee and the puckery taste of black tea as well as enriching the faint taste and fragrance peculiar to black tea.

■ Heavy drinking and hangover

It will be good for your health if you drink it before going to bed or drink it on the empty stomach in the morning.



BTM-303D (영).indd 22 2016-08-31 오후 1:26 13

■Various dishes

When cooking bamboo shoots, tree shoots, taro and seaweed with the alkaline water, the biting taste and the souring taste will be gone while the natural taste will enriched. When using it as the water for cooking fish, the fishy smell will be eliminated, making the fish taste better.

■Liquors, cocktails

The liquors will be made highly mild and soft. When making an ice cocktail using the alkaline water, the taste will be better

■Plants

If seeds are soaked in the alkaline water before being sowed, the germination rate will be enhanced. Even in case of stem cutting or grafting, plants will take root better. When the water is applied for ornamental plants, the growth of roots will be facilitated. The alkaline water will neutralize the acid soil and effectively facilitate the growth of plants.

■Vegetables, fruits

If vegetables or fruits which are to be stored are washed using the alkaline water, they can be kept fresh for a longer period of time.

■Vegetables with unpleasant odors

When cooked after being soaked in the alkaline water for about 20~30 minutes, oder will be reduced, making vegetables more soft and tastier

■Powdered milk for infants

When mixed with the alkaline water, the powdered milk will be healthier food for infants to eat.

4. How to use the Acidic Ionized Water for special purposes

■Bathing, washing of the face, washing of feet

When used for bathing, the acidic water can be a beauty solution good for your skin. The acidic water is astringent helpful in making the skin soft and elastic (Skin is mildly acidic). When the acidic water is used as rinse for the hair just shampooed, it will neutralize the alkalinity of the soap, helpful in keeping the hair glossy. When the acidic water is used as sanitary or astringent solution for the skin just shaved, it can replace the skin toner or skin lotion.

■Floral arrangement

When the acidic water diluted 1:2 is applied to the cut part of the flowers, it will keep the flowers fresh for a longer period of time.

■Water for parboiling noodles

When the acidic ionized water is used for parboiling noodles, it will keep them glutinous, chewy and tastier (Thicker noodles for spaghetti, for example, may not be well parboiled with the acidic ionized water, then the alkaline ionized water can be used).

■Washing or processing of fruits and vegetables which contains anthocyanin

When peaches, grapes, strawberries, red cabbages, beans and Asparagus are washed and processed with the acidic water, their natural colors can be kept without a change.

■When preparing fried dishes

When the acidic ionized water is used for preparing fried dishes, the foods will be crispy and tastier.

■When boiling eggs

When the acidic ionized water is used for boiling eggs, the eggs will peel off easily and taste better a lot.

■When cleaning

When the acidic ionized water is used for cleaning corridors, and tiled floors, the dusts of every nook and corner can be easily removed. The acidic ionized water is also fast in drying, so it is not sticky.

■When cleaning glass

When glass, mirrors and glasses are washed with the acidic ionized water, dusts or filth can be easily eliminated and the gloss will be made better. Try to clean household items such as washbowls and chairs and they will be made surprisingly clean.

■When deposits are formed at a kettle or a pot is incrusted due to burning

When deposits are formed at the kettles, or pots are incrusted due to burning, try to place them in the acidic ionized water for overnight, and then they will be made clean.











■As the bathing water or for the cleaning of the bathtub

When the acidic water is mixed and boiled together with the bathing water, the combined water can be easily boiling due to the high thermal conductivity of the acidic water. The bathtub can be kept clean because the slime in the water does not build up easily.

■When cleaning t he chopping board

When you use the chopping board continuously for a long time, it will be full of knife scars. Then filthy impurities can be stuck in those knife scars. Use the acidic ionized water to clean and sanitize the chopping board completely.

■When cleaning the tableware

Considering that the acidic ionized water has the cleaning as well as sterilizing power, it can be used for cleaning the tableware.

■When washing the floors

The floorcloth, which is constantly kept wet, is the hotbed for molds. When the acidic ionized water is used for washing the floorcloth, filthy odor can be removed and also the sterilizing effect can be enjoyed. The same goes for the dishcloth



Caution - Should follow the items for your safety.



- Do not spray water onto the product for cleaning.
- •If not followed, electric shocks can be caused.



- Do not use benzene, thinner or insecticidal sprays for cleaning the product.
- •If not followed, the outer shape and main body can be transformed or cracks can be caused.



• Contact the sales shop or the main office for advice when you try to use the product which has not been used for a long period of time

10

Using Ionized Water





For the use of the sys
system

<i>[</i> −¯\	
Q (Questions)	A (Answers)
Can we use the underground water?	Yes, the ground water can be used
	But, the designated pH concentration level may not achieve depending on areas and quality of water. Before installing the system, you need to check whether the requirements for the drinking water can be met. [Contact the sales shop or the main office for more detailed information]
How to handle the product when we will not use for a long period time (More than 10 days)?	 The filter needs to be disconnected from the main body, packed into a vinylpackage and stored in a refrigerat Disconnect the electric plug. When you start to use the system newly after the peric you need to replace the filter. Then you need to use water after letting the water flow through for about 3 minute

BTM-303D (영).indd 24 2016-08-31 오후 1:26114

• Only the water temperatures that is below

30°C can be used within the water unit.

What temperature the flowing water is allowed

to keep?

About
the
alkaline
ionized
water

Q (Questions)	A (Answers)
The red lamp is turned on at Strong Alkaline level 5". Is it OK when we use the water for soaking out the puckery or bitter tastes of vegetables or washing them?	 There should be no problems with using the water for soaking out the puckery or bitter tastes of vegetables or washing them. Do not use the water for daily drinking.
When we get the alkaline ionized water in a cup, there are white bubbles. What are those bubbles?	 The bubbles are generated because, while ions are generated, the molecules of alkaline ionized water are so tiny and the dissolved hydrogen is sufficiently available. The bubbles can be generated highly right after the installation, or the replacement of the filter. There should be no problems using the product.
When we get the alkaline ionized water in a container, there are white substances forming, or depositing on the bottom. What are those?	The white substances are generated because the alkaline ionized water contains lots of mineral calcium. Especially when the carboxyl group(CO ₃) is abundant, it isbonded with calcium, leading to the precipitation of calcium carbonate (CaCO ₃). It shows that the electrolysis is surely working. Even though there should be no problems with drink the water, you need to clean the container. Fill the water container with the diluted household vinegar and leave it for one hour. Then shake the container for cleaning.
How about cooking rice using the alkaline ionized water?	 Rice can be sticky depending on the volume of water, kinds of rice and kinds of rice cooking appliance. Use the water after setting the appropriate level of ionized water.
Which water would you recommend for the infants?	It is recommended that the infants are fed low alkaline ionized water. (Alkaline Ionized Water level 1.)

About the alkaline ionized water

Q (Questions)		A (Answers)		
What is the pH of the acidic water coming out of the acidic water outlet in the middle of the alkaline ionized water being used		Selection level	Acidic water pH value`	Purpose
		trong alkaline pH10.0±0.5	pH4.0±0.5	Eliminate the fishy smell after cooking fiish
		Drinking, culinary pH9.5±1.0	pH4.0±1.0	Clean the
	Alkaline	Drinking, Cook pH9.0±1.0	pH5.0±1.0	tableware
		Initial drinking pH8.0±1.0	pH6.0±1.0	
		he pH value can l uality of water an		•
What kind of impact can the acidic water might have on the skin?	The human skin is mildly alkaline to pH 5.5. The alkaline water not only help keep the acidity of the skin at an appropriate level, but also			
	help the contraction of skin pores to help keep the constantly elastic and moisturized.			

About After Sales Service

- You need to check the following items before requesting the repair work if you think the system is malfunctioning:
- You should not try to disassemble and repair the system. Contact the sales shop or the main office when the system is malfunctioning.
- $_{
 m 3\%}$ When there are abnormalities with the system because of your mishandling of the system, the electric plug needs to be disconnected. Afterwards, restart the system. The system will be restored to normal operation.

■When the following lamps are indicated.

Symptoms	Causes and actions	
The power can not be turned on, or is turned off in the middle of the use.	●Is the water flow volume insufficient? (At least 0.5t/Min. is required) => Open the water branch pipe and adjust the water flow volume. ●Is the electric cord appropriately inserted? => Insert the cord into the wall socket correctly. ●Is the fuse cut off? Check the fuse. ●After inserting the electric cord into the wall socket, you need to check whether a'beeping' sound is generated when pushing the button lightly. => The beeping sound means that there are no problems we the fuse.	
The power is turned off inadvertently in the middle of the use (Periodically On/Off repeatedly)	•It is because of the bimetallic safety system for the overheating inside the system in case of long hours of operation. When the temperature goes down after the water supply control value is turned off, you can turn on the valve for the use.	
Once after [Strong alkaline], [Acidic] and [Purified water] is used, the indication will change into [Alkaline	When the water supply control valve is turned off once after [Strong alkaline], [Acidic] and [Purified water] is used, the setting will be restored to the previously set value of [Alkaline] automatically. Not malfunctioning.	

Symptoms	Causes and actions	
1) ERROR MODE: Error indication by ERR 3 (For overheating of electrolysis cell) 2) ERROR MODE: Error indication by ERR 7 (For Self-Cleaning failure) 3) ERROR MODE: Error indication by ERR OF (For excessive water flow volume) 4) ERROR MODE: Error indication by ERR 8 (For a fake filter)	1) Indication for a fake filter - Need to replace with a genuine filter designated by the company 2) Indication for the Self-Cleaning failure when letting water flow through in the middle of Cleaning. 3) Indication for water flow volume exceeding 3.3 /Min. 4) Indication for a fake filter - Need to replace with a genuine filter designated	
[000] is not displayed after filter replacement.	Did you insert the filter connector into the corresponding port? Insert the connector correctly. Check whether the filter is a genuine one made by the company. In a unbranded filter is installed, there will be a voice guidance saying "Filter rejected, mount correct one" and the power will be turned off after 20 seconds. Did you insert the filter connector while ionizer was unplugged insert the power plug and put the filter connector into the portion.	
The filter use indicator is not visible.	Is the water flow suspended? When the water flows through, the indication will be turned on. When it stops, the indication will be turned off. Is the electric plug disconnected? Reconnect the plug. The system is malfunctioning. After disconnecting the electric plug, you need to contact the sales shop for advice. The power will not be turned on when the water flow can not be detected due to the lower water pressure. (Pressure of the tap water is less than 0.6kgf/cm2)	
All lamps of the main body are turned on. (Still turned on even after the water flow is stopped)	The system is malfunctioning. After disconnecting the electric plug, you need to contact the sales shop and request repair work.	
No melody plays, even during the Acidic function.	Check that the Acidic button has been selected. *Allow water to flow and press the Acidic button.	
Filthy odors, weird tastes and murky substances are not eliminated.	●The filter performance is degraded. => Replace the filter. ●Is the water pressure low? => Open the water branch pipe for adjusting (Contact the sales shop or the main office when the problem is not solved even after the widest opening of the water branch pipe) ●Is the water flow volume too high? => Adjust by the water supply control valve.	

BTM-303D (영).indd 27 2016-08-31 오후 1:26 14

Symptoms	Causes and actions
The outflow water volume is low or there is no outflow. The life span of the filter can be shortened when it is blocked due to the sever pollution of the source water.	Is the life span of the filter overdue? (Need to check the filter usage status number) => Replace the filter. Is the filter wrongly fixed? => Fix it right. Is the water supply suspended? => Wait until the water supply is resumed. Is the hose bent or crushed? => Set it right.
The water becomes warm when it flows through the main frame.	When the water flows through initially, the water can become warm due to the room temperature or the heat inside the main body. Not malfunctioning. Use the water after let the water flow through.
The pH of the acidic water is indicated as neutral.	For about one week after the new filter is installed, the pH value of the acidic water may not fall into the range of the colorimetry (Due to the effect of the activated carbon) Not malfunctioning. Check again one week later. If the pH value of the acidic water is 6.5, the value may be not compatible with the samples of the pH measurement sheet.
Water leaks from the bottom of the main body.	Is the acidic water drainage hose bent or crushed? (The water may not taste good) => Set it right
Water leaks from the bottom of the main body.	•Is the acidic water drainage hose bent or crushed? (The water may not taste good) => Set it right

28

Symptoms	Causes and actions	
Water keeps [dripping] from the outlets (Especially the acidic water outlet) even after the water supply control valve is turned off.	The remaining water inside the outset can comes out Not malfunctioning. The rinsing operation is in progress. Not malfunctioning.	
When tested with the pH test solution, it is yellow for the acidic water, but in case of the alkaline water, the color becomes neutral momentarily.	•It is due to the effect of the carbonic acid in the water. (Severe in case of the ground water) => Use the water after adjusting the stage of the alkaline ionized water to level 5. Considering that the alkaline reaction and the acidic reaction occur in an opposite way, so it is understood that the alkaline ionized water is generated also if there is acidic reaction taking place. We can simply say that the symptom is the result of the vaporization of the test solution due to the chemical reaction involving the carbonic acid in the water.	
Water smells disinfectants * Various causes can lead to the symptom. If the problem is not solved by replacing the filter, the water purification process needs to be selected to check the problem. When there is still nothing found about the problem, the items on the right side need to be checked.	Check whether the storage container is cleaned. Wash the storage container cleanly. The life span of the filter can be shortened due to pollution depending on the condition of the water supply. Replace the filter (Refer to Page 18~20). The ionized water has less crusts of water, meaning that the water is highly active for reaction. Extremely low volume of impurities, when spread throughout the water, can cause the water to be activated together and, possibly, the water to smell. Use the water by adjusting the alkaline level by down by 1~2 level. Check whether the acidic water hose is higher than the main body. Install the hose 50~70cm below the level of the main body.	
The power is not turned off when the water supply control valve is turned off.	The system is malfunctioning.	
Water leakage at the water purifier. (Filter socket)	Check whether the filter is appropriately fastened into the filter socket. After checking the filter packing, you need to fasten it to the filter base appropriately.	

29

Product Specifications

Pro	Product Name Water Ionizer			
Model		BTM-303D		
Protection Type and Class		Class 2, Type B Equipment		
Rated Power Supply		□ 220V □ 230V □ 240V □ 120V / □ 50Hz □ 60Hz		
Rated Fuse		125V / 3A 250V / 3A		
Wa	ater Supply	Tap Water		
Main	Dimension	280×360×155 (W×H×D)mm		
Unit	Weight	About 6Kg		
Water Pressure 70		70~500kPa		
Ope	perating Temp. 5~30 °C (41~86° F)			
Protection Devices Built-in Temp. S		Built-in Temp. Sensors: 2 Sensors (Automatic Restoration)		
Ca	Method	Continuous Electrolysis		
	Capacity	0.6ℓ/min ~ 3.3ℓ/min MAX Standard 1.5ℓ±0.5ℓ/min		
Electrolysis	Steps pH level	Alkaline: 4 Levels / Acid: 1 Level		
lysis	Cleaning	Auto Cleaning (Time: Approx. 30sec., Drain: Approx. 0.2ℓ) and Manual Cleaning		
	Electrodes	Platinum-Titanium Electrodes, 5 / 7Plates		
Purification Filter	Replacement	Cartridge Type (1 Stage)		
	Lifespan	3000liters : (Approx. 6 months/based on 200or 5.3 gallons per day)		
	Indication	Lifespan Indication by LCD		
	Material	Nonwoven fabric, Granular activated carbon, Calcium sulphite, UF membrane filter		
Effect and efficacy		Chronic Diarrhea / Intestinal Abnormal Fermentation / Indigestion / Gastric Hyperplasia		
Manufacturing License		KFDA Manufacturing License No. 889		
Product License		No. 09-387		

Consimer Damage indemnification Guidelines

Type of consumer damage		Indemnification		
		Within warranty	After warranty	
Defect or malfunction in performance and function that occurred during normal operation	If repair is necessary within a month after purchase due to manufacturing defect.		Replacement	Charged service
	If a replaced product requires major repair within a month of replacement.		Replacement	Charged service
		If defect occurs.	Free service	Charged service
	Reparable	If the same defect reoccurs after repair (more than four times).		Replacement
	Not reparable		Replacement	after amount deduction
	If repair is impossible due to lack of parts. (The company should carry parts for 5 years.)			
	If a product handed over for repair was lost by the company.		Replacement	Replacement
	Damage during transit		Replacement	Charged service
Defect or malfunction as a	Reparable		Charged service	Charged service
result of consumer's Not reparable negligence or error		Replacement after totaling repair cost	Separate criteria	
 ▶ Malfunction as a result of an act of God (fire, salt damage, gas, earthquake, wind or flood) ▶ Normal consumption of a consumable ▶ Problem due to consumer not using a consumable or optional item as designated ▶ Any other problem as a result of external causes. ▶ Problem that occurred due to product serviced by an unauthorized person 		amage, gas, earthquake, wind or flood) Normal consumption of a consumable Problem due to consumer not using a consumable coptional item as designated Any other problem as a result of external causes. Problem that occurred due to product serviced by		Charged service

The most advanced water purification and ionization system







Acquired ISO 9001 Certificate Acquired ISO 14000 (international standard for nvironmental management system)



Korean Intellectual Property office



Class Registered U.S. Food and Drug Administration





Bion-Tech Co.,Ltd.

Manufacturer

Bion-tech Co., Ltd.

Tel: 82-31-459-3853

298-15 Gongdan-ro(Geumjeong-dong), Gunpo-si, Gyeonggi-do South Korea

Fax 82-31-429-3859 E-mail: btm@biontech.biz http://www.bion-tech.com (Korean) http://www.biontech.biz (International)

Distributor





BTM-303D (영).indd 32 2016-08-31 오후 1:26:15